



QUALITY... PLAIN & SIMPLE®

**Throttle Pedal Pad Installation Instructions
Using the Customer's Original Pivot Pin**

Throttle Pedal Pad Installation Instructions

Using the Customer's Original Pivot Pin

Building American Quality... With A Lifetime Warranty!®

TOLL FREE 1-877-469-7440 • tech@lokar.com • www.lokar.com

General Installation Notes:

Please read instructions completely before beginning installation. If you have any questions please call.

Before starting installation, scotch vehicle tires to avoid accidental movement of the vehicle. Do not attempt to install this product while the engine is running. Disconnect negative battery cable before beginning installation.

We recommend applying anti-seize lubricant to all aluminum threads before final assembly.

Refer to Fig. 1 and Fig. 2 for the component names.

Step 1: Unhook the pedal spring from the pedal rod to relieve the tension. **Fig. 2** Remove the original throttle pedal pad from the pedal rod by pulling the pivot pin out of the original pedal pad.

Step 2: Install the new throttle pedal pad onto the throttle pedal back using the #8-32 x 3/16" button head screws. The throttle pedal back will be positioned with the pivot pin holes closest to the center of the pad. **Fig. 3**

Step 3: Position the throttle pedal pad on the pedal rod. Insert the original pivot pin (not included) through the left side of the throttle pedal back, and then through the pedal rod. Position the original throttle pedal spring (not included) into the throttle pedal back. Push the pivot pin through the throttle pedal spring and then through the right side of the throttle pedal back. **Fig. 4**

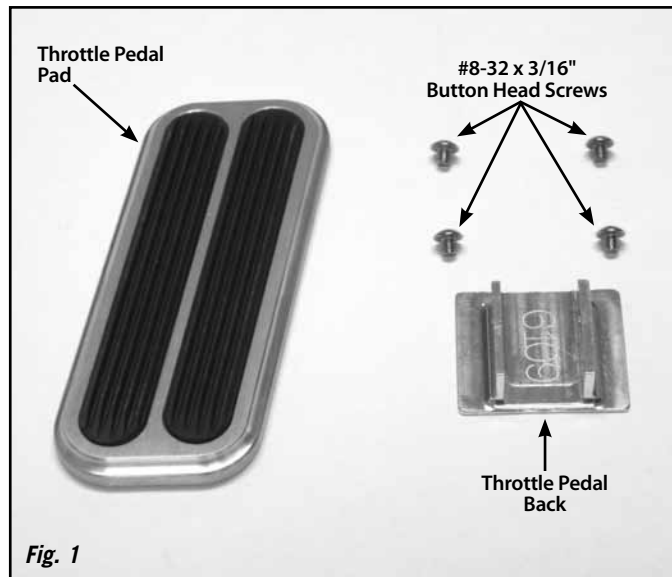


Fig. 1

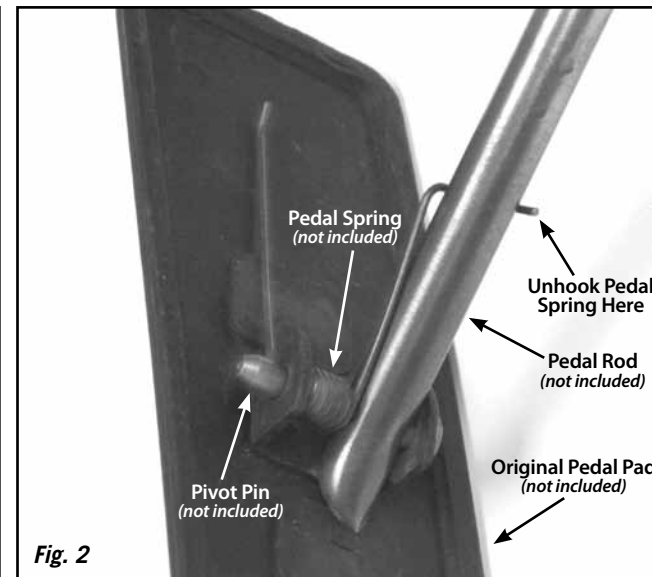


Fig. 2

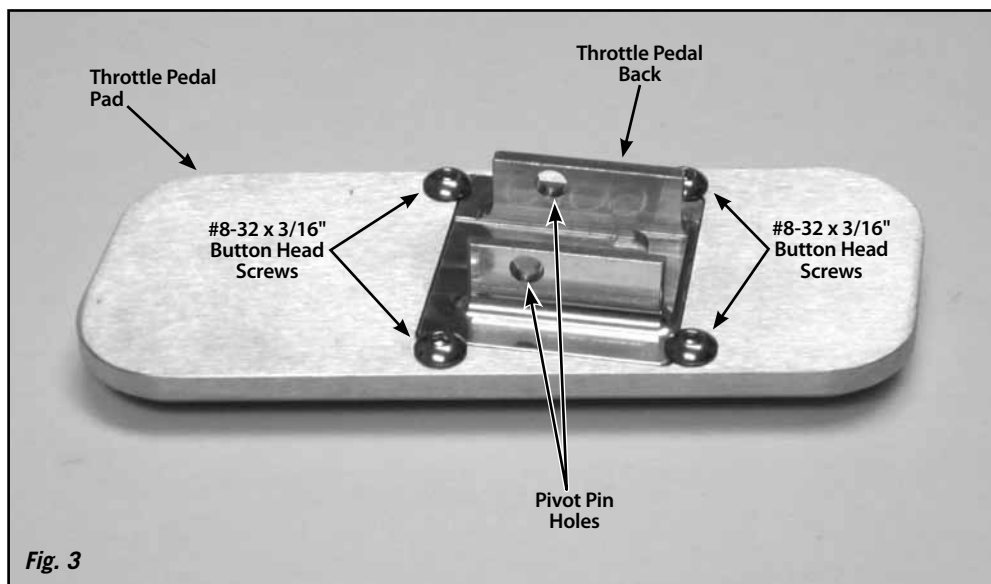


Fig. 3

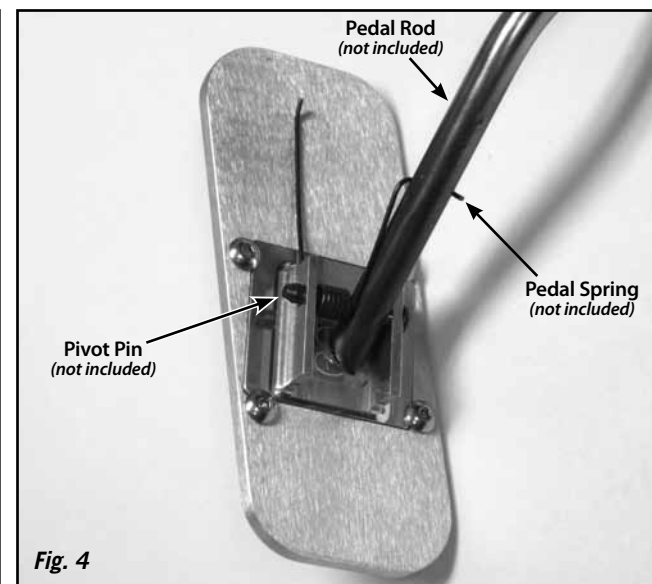


Fig. 4