



QUALITY... PLAIN & SIMPLE®

Model A Decorative Radiator Cap Installation Instructions

**Building American Quality...
With A Lifetime Warranty!®**

TOLL FREE 1-877-469-7440 • tech@lokar.com • www.lokar.com

General Installation Notes:

Please read these instructions completely before beginning the installation. If you have any questions please call.

Before beginning the installation, disconnect the negative battery cable and use wheel chocks to block the vehicle's wheels.

WARNING: This Radiator Cap is for decorative use only, and is not designed to hold cooling system pressure!

Step 1: Remove the #8-32 x 1/8" set screw using a 5/64" Allen wrench. Apply blue thread locking compound to the threads on the set screw, and reinstall the set screw. Make sure the set screw is far enough out that it will not interfere with the inside threads on the Radiator Cap.

Step 2: Carefully thread the Radiator Cap onto the stanchion on top of the radiator until it bottoms out. Then, back it off until the wings on the Radiator Cap are parallel with the radiator and the set screw is towards the rear of the vehicle. Make sure that the hood will open without contacting either of the wings, and adjust as necessary.

Step 3: Once the Radiator Cap is positioned correctly, use the 5/64" Allen wrench to snug down the set screw. Be careful to not overtighten the set screw.

