



QUALITY... PLAIN & SIMPLE®

Air Cleaner Nut Installation Instructions


**Building American Quality...
With A Lifetime Warranty!®**

TOLL FREE 1-877-469-7440 • tech@lokar.com • www.lokar.com

General Installation Notes:

Please read these instructions completely before beginning the installation. If you have any questions please call.

Before beginning the installation, disconnect the negative battery cable and use wheel chocks to block the vehicle's wheels.

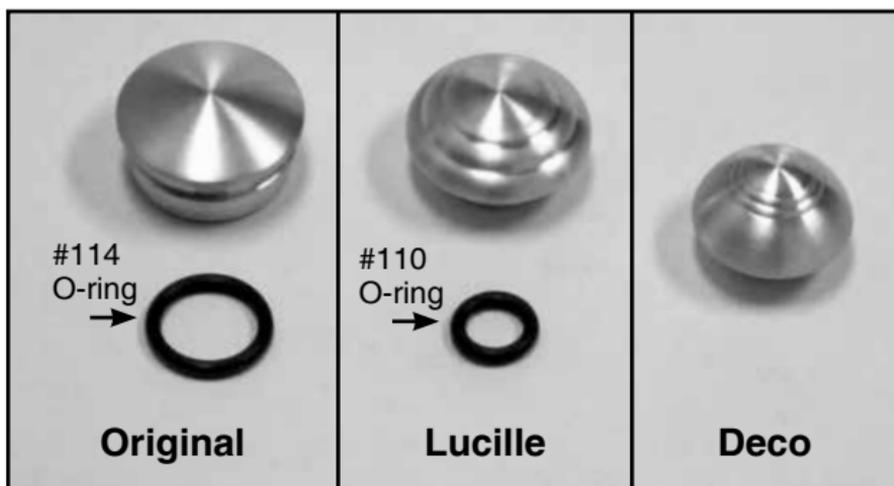

Step 1: Make sure you have between 3/8" and 1/2" of threaded stud (1/4"-20 thread, not included) extending out of your air cleaner with the air cleaner installed. If you have less than 3/8" of the threaded stud protruding from the air cleaner, loosen the stud and unthread it enough to get the 3/8" minimum. If you have more than 1/2" of threaded stud extending out of your air cleaner when it is installed, remove the stud and shorten it so that you have between 3/8" and 1/2" of threads protruding.

Step 2: Apply a small amount of anti-seize to the threaded stud.

"Original" and "Lucille" Air Cleaner Nuts only: Install the provided o-ring in the groove on the bottom side of the Air Cleaner Nut.

Step 3: Thread the air cleaner nut onto the threaded stud until it is snug. Make sure the air cleaner is not loose. If it is, you will need to shorten the threaded stud a little more, and test fit again.