

CLAYTON MACHINE WORKS

GM LS Engine Oil Cap Installation Instructions



865 - 824 - 9778

tech@claytonmachine.com • www.claytonmachine.com

General Installation Notes:

Please read these instructions completely before beginning the installation. If you have any questions please call.

Before beginning the installation, disconnect the negative battery cable and use wheel chocks to block the vehicle's wheels.

Step 1: Remove the existing oil cap.

Step 2: Lubricate the O-ring on the new oil cap with clean engine oil. **Fig. 1**

Step 3: Install the new oil cap.



Lubricate O-ring with
clean engine oil

Fig. 1