



QUALITY... PLAIN & SIMPLE®

Ford EFI Cable Bracket Installation Instructions For 1986-1993 EFI with Mustang EGR Spacer

General Installation Notes:

Please read these instructions completely before beginning the installation. If you have any questions, please call.

Before beginning the installation, disconnect the negative battery cable and use wheel chocks to block the vehicle's wheels.

Make sure the engine, transmission, body and frame are properly grounded. We recommend using anti-seize lubricant on all aluminum threads.

This bracket is designed to use a Lokar Throttle Cable (not included) and Lokar Kickdown Kit (if applicable, not included). The engine must have a Mustang EGR Spacer (not included) in order to install this bracket. This EFI bracket does not fit with BAP throttle bodies.

Refer to Fig. 1 for the component names.

Step 1: If there is an existing throttle cable and/or cable bracket installed, disconnect the throttle cable and remove the cable bracket from the engine.

Step 2: Using your original bolts, attach the new cable bracket to the original location on the Mustang EGR spacer.

Step 3: Proceed with the installation of the Lokar Throttle Cable and Kickdown Kit (if applicable), following the instructions that came with those items.

See Fig. 2 for a completed installation with Lokar Throttle Cable and Kickdown Cables.

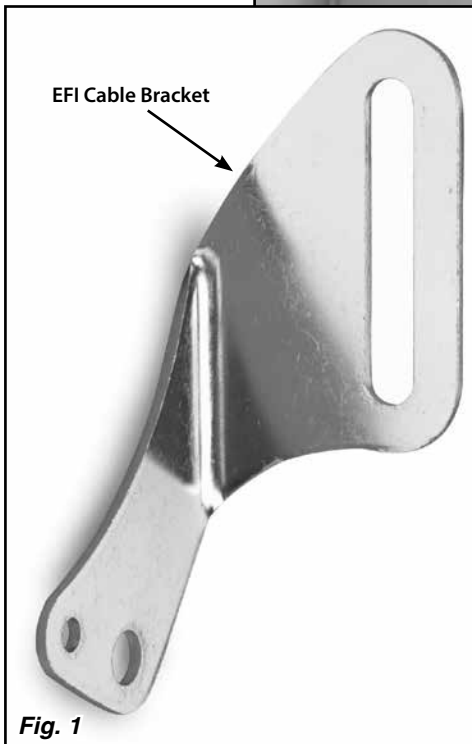


Fig. 1

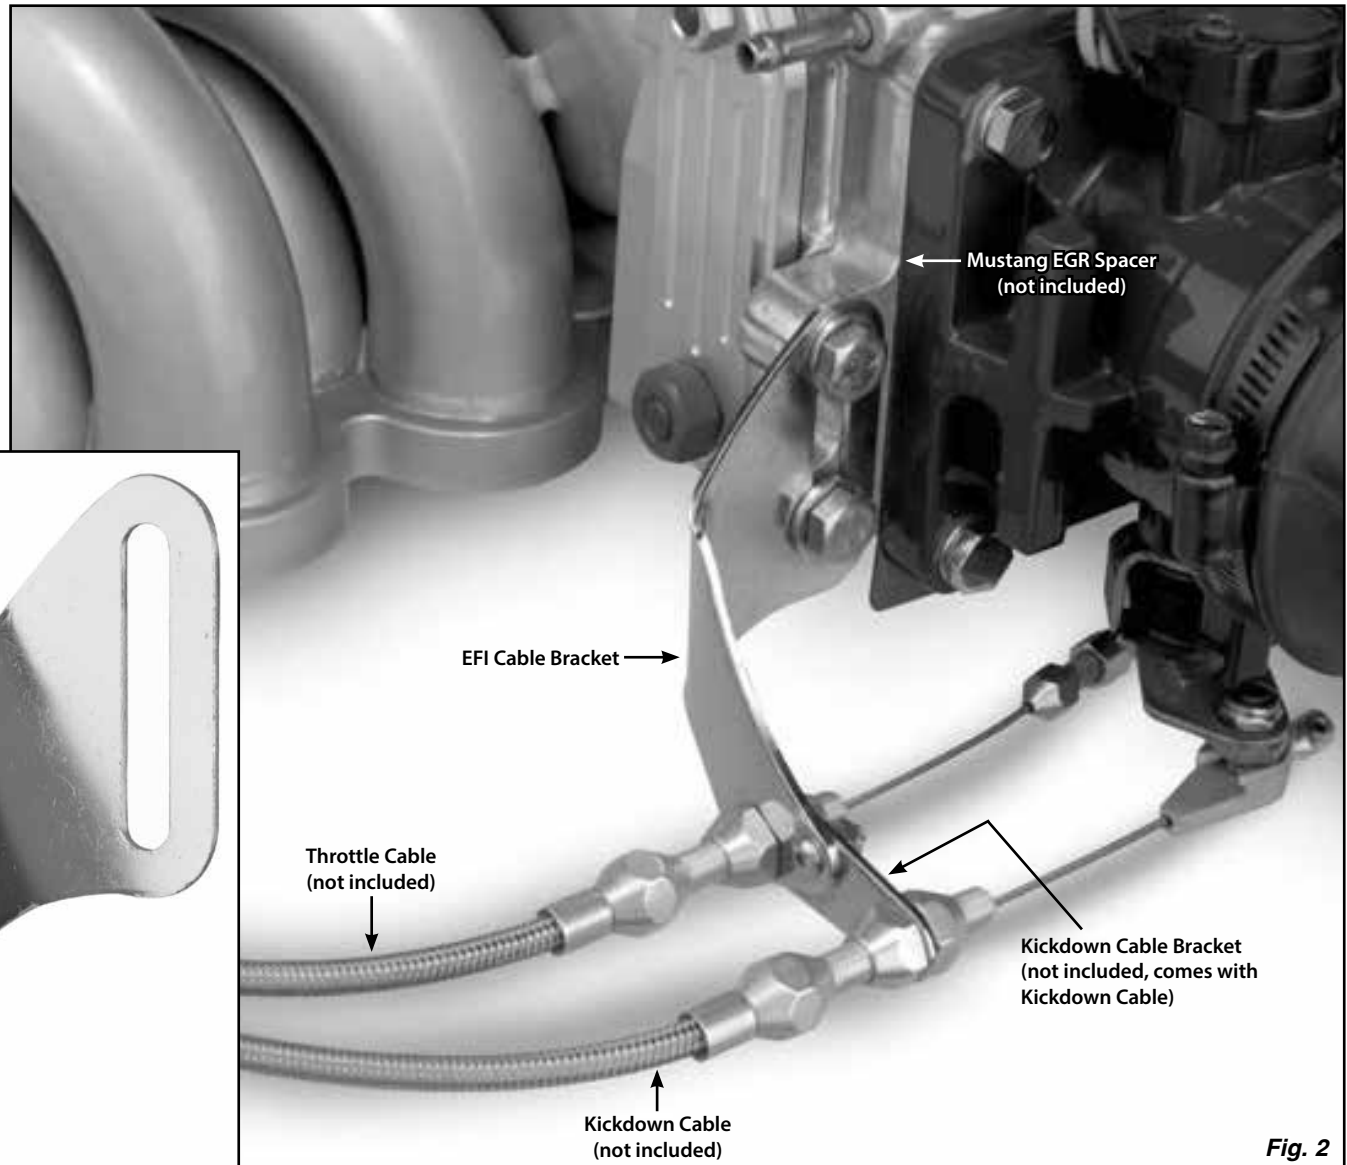


Fig. 2

Ford EFI Cable Bracket Installation Instructions For 1986-1993 EFI with Mustang EGR Spacer

Building American Quality... With A Lifetime Warranty!®

TOLL FREE 1-877-469-7440 • tech@lokar.com • www.lokar.com