



QUALITY... PLAIN & SIMPLE®

Billet Aluminum Arm Rest Door Pull Installation Instructions

General Installation Notes:

Please read these instructions completely before beginning the installation. If you have any questions please call.

Before beginning the installation, disconnect the negative battery cable and use wheel chocks to block the vehicle's wheels.

We recommend using anti-seize lubricant on all aluminum threads.

Refer to Fig. 1 for the component names.

The Lokar Billet Aluminum Arm Rest Door Pulls can be mounted in a wide variety of applications. The following instructions are intended to be only a general guideline. Each application is somewhat different, and yours may require a different mounting method than what is discussed here. It is likely that you will need to modify the door pull brackets to make them fit your application and mounting position.

Step 1: Determine exactly where the Door Pulls will be mounted. The door pull bracket is designed so that the Door Pull will attach to the long leg of the bracket, and the short leg of the bracket will attach to the inner door structure. See **Fig. 2** and **Fig. 3** for two examples of how the door pull bracket may be mounted. Your application may require a different arrangement.

Step 2: If needed, modify the door pull bracket to make it fit your door and to position the Door Pull where you want it.

Step 3: Measure the drawing on the paper template that matches your style of Door Pull to make sure it matches the dimensions listed on the template. Cut out the template, making sure to cut **INSIDE** the lines.

Step 4: Trace the template onto your interior door panel. Cut the material out of your door panel, again making sure you cut **INSIDE** the lines. It is much better to cut the opening a little too small to start with than to cut it too large.

Billet Aluminum Arm Rest Door Pull Installation Instructions

Building American Quality... With A Lifetime Warranty!®

TOLL FREE 1-877-469-7440 • tech@lokar.com • www.lokar.com

Step 5: Install the door pull bracket onto your inner door structure. The two-sided tape on the door pull bracket is only intended to be an installation aid. You must secure the door pull bracket to your inner door structure by drilling holes and installing sheet metal screws (not included) or some other type of suitable fastener. Make sure the fasteners are not long enough to interfere with movement of the window or door latch mechanisms.

Step 3: Install the interior door panel. Insert the Door Pull into the opening, and secure to the mount bracket with the provided #8 x 1" Phillips oval head screws.

Step 4: Repeat for the other door panel. See **Fig. 4** and **Fig. 5** for completed installations.

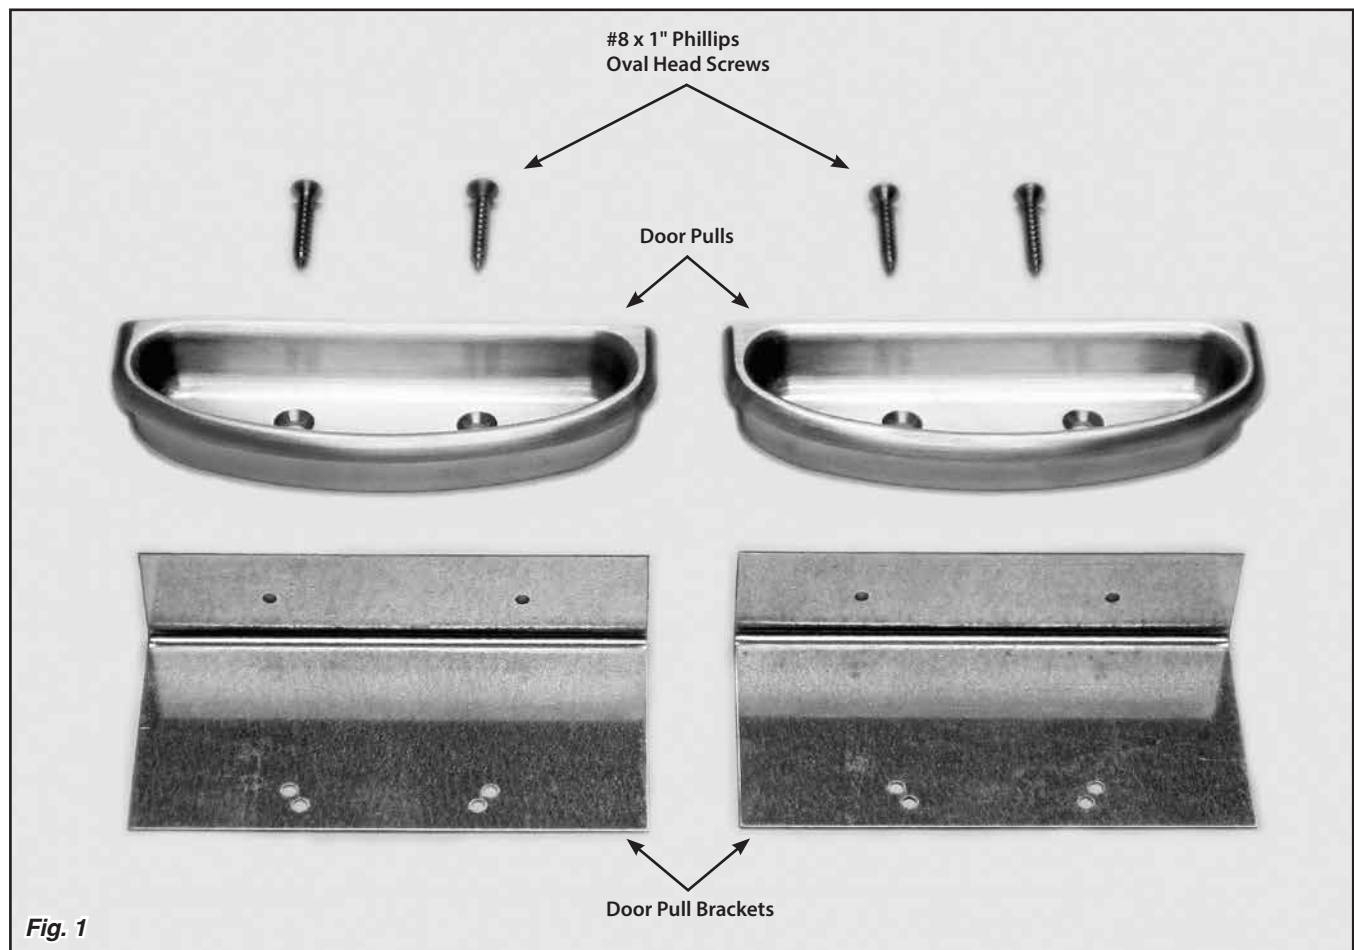


Fig. 1

Billet Aluminum Arm Rest Door Pull Installation Instructions

