



QUALITY... PLAIN & SIMPLE®

## Connector Cable Installation

EC-8003U & EC-8003HT (39-48 Chevy)

# Connector Cable Installation Instructions

Part# EC-8003U & EC-8003HT (39-48 Chevy)  
For Under-the-Dash Hand Operated Emergency Brake

Building American Quality... With A Lifetime Warranty!

10924 Murdock Dr. • Knoxville, TN 37932  
TOLL FREE 1-877-469-7440 • (865) 966-2269 • FAX (865) 671-1999 • tech@lokar.com • www.lokar.com

### Connector Cable Installation

**Step 1:** Install outer housing to hand brake with E-Clip as shown in **Fig. 1**.


**Step 2:** Run housing back to rear cables. If you are using a Lokar Universal Rear Emergency Brake Cable Kit, mount connector cable bracket 9 1/2" from rear cable adjuster as shown in **Fig. 2**.

**Step 3:** Run inner cable from hand brake, using clevis end at hand brake. Make sure hand brake is in the full off position.

**Step 4:** Be sure to adjust the adjusters all the way in when connecting cables as shown in **Fig. 2**.

**Step 5:** Adjust all cables as needed to remove any slack.

**Fig. 1**

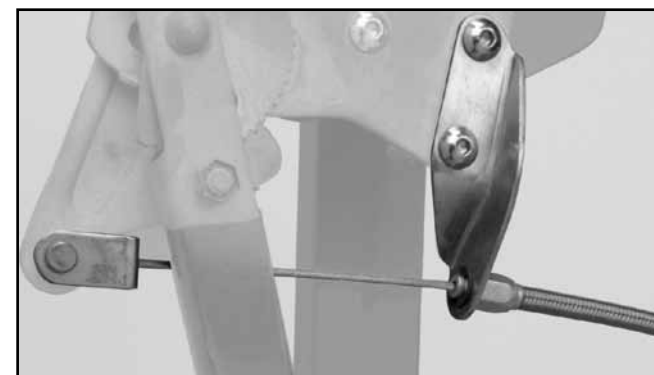

**Fig. 2**

